



**MASONITE® FRENCH DOOR SERIES –
With Acrylic Inserts
CARE & HANDLING INSTRUCTIONS**

HANDLING

All French doors with acrylic inserts ship with a protective film that should not be removed until after door finishing is complete.

**Please refer to HOW TO PAINT or HOW TO STAIN
instructions for finishing details at Masonite.com**

To remove the protective film, use a sharp blade or knife to carefully cut away the protective plastic film without scoring the acrylic surface, leaving clean edges around the acrylic inserts.

CLEANING

- Use warm water, mild soap or detergent, and a soft sponge, cloth, or chamois to clean the insert.
- **Do not** use glass cleaning products (such as Windex), acetone, gasoline, benzene, lacquer thinner, chlorinated solvents, gritty abrasive scouring compounds, or alkaline cleaners to clean the acrylic inserts as damage to the insert will occur.
- **Do not** use squeegee, scraper, or synthetic rags that may scratch.
- **Never** scrub the acrylic. Gently wipe surface with a soft, scratch-free cloth.

MAINTENANCE

- Clean acrylic inserts with soap & water or an acrylic cleaner such as Novus or Gel-gloss, as required.
- Anti-static guard spray may be used to minimize accumulation of dust on acrylic surfaces.

NOTE: Text inside box to be printed on white sticker with removable adhesive.
Minimum label dimensions = 4"x6"; Maximum label dimensions = 5.5" x 8.5"