

# HOW TO PAINT STEEL & FIBERGLASS ENTRY SYSTEMS

**BARRINGTON**  
ULTIMATE STYLE & DURABILITY

**BELLEVILLE**  
DISTINCT ARCHITECTURAL DETAILS

**OAKCRAFT**  
WOOD GRAIN TEXTURED

## IMPORTANT

Please read and understand the entire staining procedure before attempting to finish the door.  
Be sure to follow the paint manufacturers detailed application instructions on the product label.

### 1) HOW TO START

Doors can be stained either hanging in the opening or removed from the frame (recommended). Should you remove the door, take care to protect it from damage. Sidelites will need to be finished vertically. To remove the door from the frame, use a center punch and hammer. Strike the hinge pin from the bottom until it pops up (for outswing & self closing units – hinge leaf must be removed from the door). Drive the hinge pin as far as possible with the punch. Using a pair of pliers, grasp the hinge pin and, while twisting, pull the pin out. Remove all door hardware.

### 2) MATERIAL REQUIRED

Find a well-lit staining location that is dust-free, well ventilated and within the climate conditions recommended by the coating manufacturer. Recommended temperature should be between 50°F-90°F (10°C-32°C) degrees fahrenheit.

#### Coatings and accessories:

- Mineral spirits
- One pair of rubber gloves
- Stir sticks
- Masking tape
- Soapy water (mild detergent in warm water)
- Safety razor blades
- Paint
  - High-quality, oil-base or 100% acrylic water-based latex paint of desired color
  - Lacquer paints are not recommended
- 2-1/2" wide brush appropriate for type of paint (A natural bristle brush should be used with oil-based paint and a synthetic bristle brush should be used with latex paint.)
- 220 grit sandpaper


#### Tools:

- Hammer
- Center punch
- Phillips screwdriver
- Pliers
- Safety glasses
- Air-less sprayer (optional)

These painting instructions apply to the following Masonite products: Masonite® Steel, Belleville™ and Barrington®.

Note: Painting instructions specifically refer to the door and sidelite panels. Oil-based paint should not be used on wood frame components (frames & brickmould).

### 3) PREPARING THE DOOR SURFACE

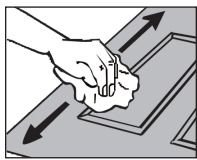

**IMPORTANT:** Dust, debris and other surface contaminants can accumulate on the surface of the door. Therefore, to achieve best results and maximum coating adhesion, wipe/clean all surfaces of the door panel(s) and sidelite(s) thoroughly with mineral spirits. Allow the surface to dry completely until there is no residual odor.

**STEEL DOORS:** Once wiped clean, the door must be lightly sanded with a 220-grit sandpaper. After sanding, the door must be washed with a mild detergent in warm soapy water, rinsed and then dried.

**FIBERGLASS DOORS:** Once wiped clean the door must be washed with a mild detergent in warm soapy water, rinsed and then dried. Mask (tape) off all surfaces that will not be painted including all glass.

### 4) PAINTING THE DOOR

Use exterior, high quality, oil-based or 100% acrylic water-based latex paint of desired color. High quality interior paint can be used on the interior surface of the door only. Lacquer paints are not recommended. Follow the manufacturer's instructions for paint application by using either a brush or a handheld sprayer.


#### Painting:

Put on gloves, safety glasses, and prepare your materials. Before starting, and occasionally throughout the project, stir the paint using smooth strokes until the texture is creamy – avoid creating bubbles.

#### Finishing with Brush Application:

Dip the brush into the paint, then use the rim of the container to release any excess paint. Apply paint as evenly as possible while still wet.

Brush strokes should follow the grain direction of the selected area. Start working on the panels and sticking (moulding profiles), then the vertical center mullion, next the horizontal rails, then the vertical stiles, and finally, the outside edges (stiles and top rail, see figure 1 for details).

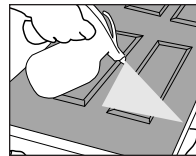

#### Finishing with Spray Applicator:

Follow the manufacturer's instructions for thinning the paint; (i.e. thin latex paint with water or oil-based with solvent for better atomization and spraying results). Strain paint before filling the spray pot.

The door can be painted in horizontal (recommended) or vertical position; however, the paint should be applied in

continuous strokes extending six inches past the edges of the door. This will ensure uniformity across the entire surface of the door. Multiple light coats are better than one heavy coat.

Avoid runs as a result of overspraying.

#### Drying:


**IMPORTANT:** Let the paint dry completely, following the manufacturer's recommended drying time before handling the painted surface or applying a second coat. If possible, allow the door to dry in a horizontal position to minimize paint runs. High humidity and/or low temperatures may extend your drying time.

**NOTE:** We require that all six sides (front and back faces plus all four edges) be painted to eliminate moisture absorption within 45 days of installation. The bottom of your door panel(s) may contain a factory installed weather-stripping (sweep) which is sealed prior to installation. Failure to observe this recommendation will void the warranty.

**WARNING:** Doors painted with dark colors or doors with attached non-vented storm doors, may become very hot to the touch in direct sunlight and void the warranty.

Do not paint the weather strip and do not close door until paint is dry (see paint manufacturer's specifications on minimum drying time).

Repainting every 1 to 7 years will be required, depending upon weather exposure.

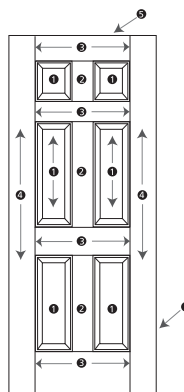

#### Grain Direction:

Figure 1: For textured door finishing with brush.

- #1 Panels and sticking (moulding profiles)
- #2 Vertical center areas (mullions)
- #3 Horizontal areas (rails)
- #4 Outside vertical areas (stiles)
- #5 Edges of door (includes both sides, the top of the door, and potentially the bottom)

Note: To maintain the product warranty, paint all exposed surfaces.

**MASONITE**

Masonite®, Barrington®, Belleville™ and Oakcraft® are trademarks of Masonite International Corporation.  
©2017 by Masonite International Corporation

**Masonite Helpline 1-800-663-Door (3667)**  
9:00 am – 9:00 pm Monday – Saturday  
10:00 am – 4:00 pm Sunday, EST  
website : [www.masonite.com](http://www.masonite.com)